


### 1. MOUNT THE BRACKETS

Determine the proper position for each bracket. The brackets should be securely mounted, equally spaced for the width of the square cassette. It is important that the brackets be mounted level to each other. Shimming may be required.



ceiling mount

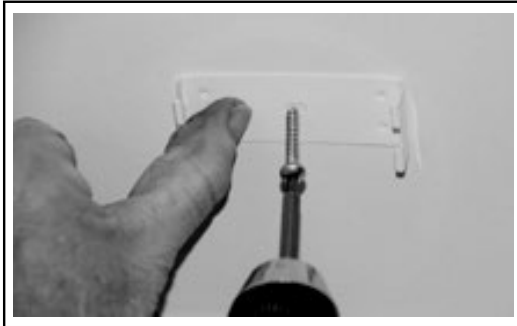

wall mount

### 2. INSTALL THE SHADE

Confirm the control position is correct. The shade should be positioned so that the opening is at the bottom and towards the back (closest to the window). Holding the shade parallel to the mounting brackets, push the square cassette up into the mounting brackets. Make sure that the lip of the mounting bracket clicks into the groove.





### 3. ATTACH STOPS TO METAL OR PLASTIC BEAD CHAIN

For plastic bead chain: use connector for top stop and attach another connector for lower stop. For metal bead chain: attach a metal stop ball at least 5/16" (8 mm) in diameter so that it touches the clutch when the shade is rolled all the way up. For both kinds of bead chain, lower the shade to sill or floor height, and snap the appropriate metal stop or plastic connector on the opposite side from the stop, so that the shade cannot be lowered beyond that point.

### 4. INSTALL THE TENSION DEVICE

**The Tension Device reduces the hazards of strangulation and entanglement of young children by limiting access to the control cord. Anchor the Tension Device, that is attached to the shade's control cord or bead chain, to the window frame or wall, so that young children cannot pull the cord or bead chain around their necks.**

- Lower the shade.
- Hold the Tension Device upright so the Warning Tag hangs straight down as shown in diagram.
- Position the Tension Device on the window frame or the wall so that the Tension Device and control cord do not interfere with raising or lowering the shade. **The Tension Device should be installed without stretching or pulling down on the control cord. Stretching the cord will cause excessive wear. Do not twist or cross the control cord.** If using stop balls on bead chain, position the tension device 1/4 inch higher to allow the stop ball to pass through the tension device.
- Holding the Tension Device upright, and in position, as shown, insert and secure the screw through the hole. **The mounting screw must be secured into a solid surface or molly.**

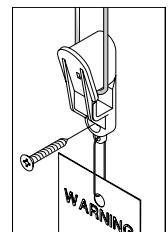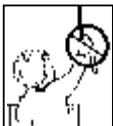

### 5. USE THE BEAD CHAIN TO OPERATE THE SHADE

Pulling gently on one side of the control cord or bead chain raises the shade; pulling down on the other side lowers it.