


# Vision Roller Shade System

## Installation Instructions

### 1 BRACKET POSITION

Fully assembled & tested: Taking any Vision™ roller shade apart for any reason will void the warranty.

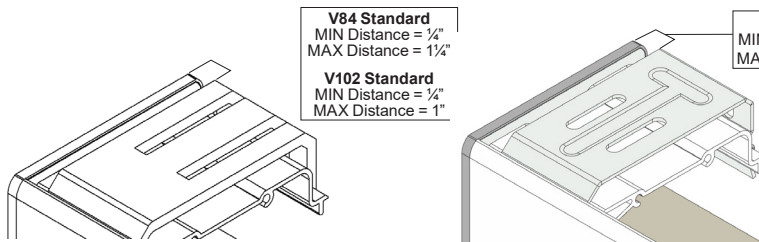


- Each Vision™ Roller Shade System comes standard with two mounting brackets.
- It is important that the brackets be securely mounted, level, and aligned to each other. Shimming may be required.

### 2 INSTALL MOUNTING BRACKETS


Attach Flex Mounting Brackets using two #8x1.5" Pan Head Zinc Screws included or equivalent, depending on the surface type. Ensure all screws should be securely fastened to a sturdy structure. For outside wall mounted applications, a spacer plate might be required.

#### V84 STANDARD & V102 STANDARD


##### Ceiling Mount

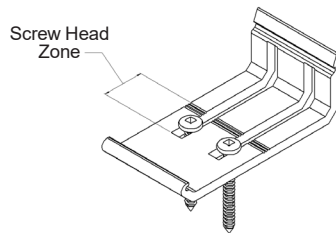

##### Wall Mount

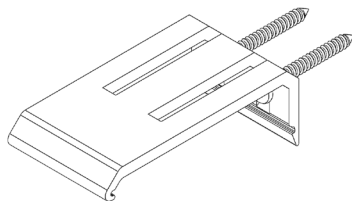


##### Lateral Mount

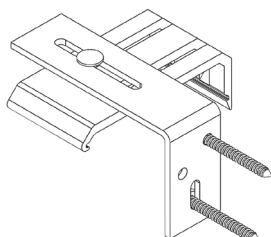


#### V84 FLEX

##### Ceiling Mount

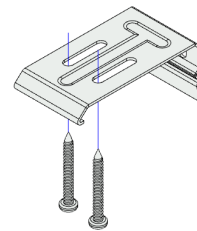

##### Wall Mount

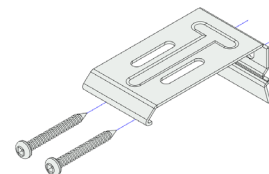


### 3

## INSTALL VISION™ ROLLER SHADE SYSTEM


With the Front Fascia facing you, insert the front edge of the Assembly Bracket onto the front lip of each Flex Mounting Bracket, push upward and back until the back edge of the Assembly Bracket snaps into the bottom tab of the Flex Mounting Bracket. **Repeat this process for each bracket.**

### V84 FLEX

Open Position

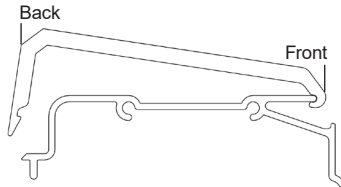


Closed Position

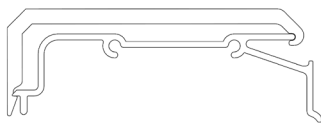


### V84 FLEX

Open Position

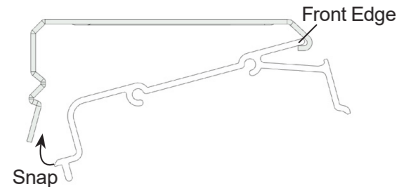


Closed Position

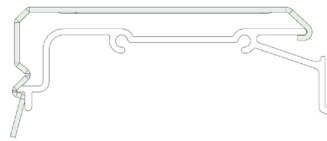

### 4

## LEVELING THE SHADE

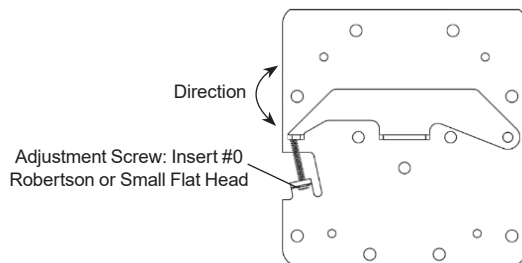

To adjust shade level if window is not square, follow the steps below. Turn the small Adjustment Screw on the Adjustable End Bracket either clockwise to raise the shade or counter clockwise to lower the shade until the shade is level.

### 5

## INSTALL THE CHAIN TENSION DEVICE

Ensure the chain tension device is carefully and properly installed.

